Smart Touch Kit

USER MANUAL

Downloaded from www.Manualslib.com manuals search engine

Contents

Introduction and Features.....3

Hardware Installation.....5

System Debugging.....8

Calibration Software.....13

Gesture recognition Introduction.....21

Application Software.....22

Troubleshooting.....28

Important information.....29

Sales Feedback Form.....30

Downloaded from www.Manualslib.com manuals search engine

Introduction

Smart Touch Kit is the first product in the world that supports finger touch and is easy to carry around. It can make any projector or LCD screen controllable by touch of the fingers. Compared with the traditional Whiteboard, the key features of Smart Touch Kit are: easy portability and finger touch control; sense any non-transparent objects in addition to fingers; no specified requirement for the display device, make any flat surface interactive; no limit on the interactive area, sizes range from 40"-100"; can work with whiteboards, save and record both marker pen and finger writing on the same board.

Smart Touch Kit includes: Laser Emitter, Camera, Calibration Software, Whiteboard Software.

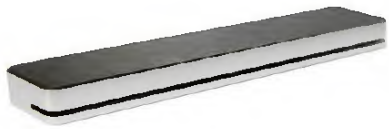

Laser Emitter

Camera

Features

1. Support finger touch: Use fingers instead of pens to write or control;

2. Support Multi-touch: Ten People can write and erase simultaneously;

3. Minimum installation distance is 35cm: For example, if the size is 80 inch, then the installation distance is around 100cm;

4. Portable and easy to install. Total weight is around 1.6kg. Just put the emitter above the projection screen by double adhesive tape, and mount the Camera on the projector or ceiling. No need for professional technicians.

5. Turn ordinary boards or walls into finger touch screens. Our product can turn any flat surface (like boards, walls, LCDs) into finger touch screens; just fix the emitter above the projection screen.

6. Able to operate on any non-transparent objects. In the active area, any non-transparent object can be used as a pen.

7. Convert normal LED screens into finger touch screens. Support active screen sizes ranging from 40-100inch. When using it, add one sheet of glass on the screen surface and fix the IWB hardware on the glass to convert LED screen into a finger touch screen. Compared to the add-on infrared technology solution, it has lower cost and there's no need to customize. The cost will not increase with the screen size.

Downloaded from www.Manualslib.com manuals search engine

Specifications

Smart Touch Kit		
Calibration	Automatic (5s) / Manual (25/36 points)	
Gesture Recognition	In Education Software: Write with single fingers, Erase with the palm, Two fingers for movements, Two fingers away for zooming in and out, Stay for 2s with the palm for opening spotlight, Double slap with the palm for going back to the desktop. In Windows: Max, Min windows, Zoom in or Zoom out or Rotate the picture, One finger as a scroll bar, Display all the windows, Shift windows.	
Multi-touch	Ten point touch, writing and erasing at the same time.	
Latency	<30ms	
Filter	Software auto-control that enhances stability.	
Minimum Active Size	40 inches	
Max Active Size	120 inches (rooms without sunlight); 100 inches(rooms with sunlight, different throw ratios for different models)	
Technology	Laser Image Calibration Technology	
Positional Accuracy	±3 Pixel (Resolution: 4096*4096)	
Aspect Ratio	4:3,16:9, 16:10	
Projection ratio	Ultra-short throw:0.28, Short throw: 0.34, Long throw:1.34	
Laser Beam	2	
Wavelength of Laser	940nm	
Power	5w	
Power of Laser Beam	280mw*2	
Power Requirements	3.3V/2A	
Signal Refresh Rate	120fps	
Connection	Camera connected to computer by USB cable; emitter just needs power; the connection between emitter and camera is wireless by IR signal;	
Weight	0.5kg	
OS Requirement	Win7、win8、win8.1、win10	
Software	Calibration software (driver) and GLBoard (education software)	
Package	1. Camera 2. Emitter 3. Mounts 4. USB cable (12m*1)	5. Pionter Pen 6. Power Adapter 7. User Manual

Downloaded from www.Manualslib.com manuals search engine

Hardware Installation

Connection Topological graph:

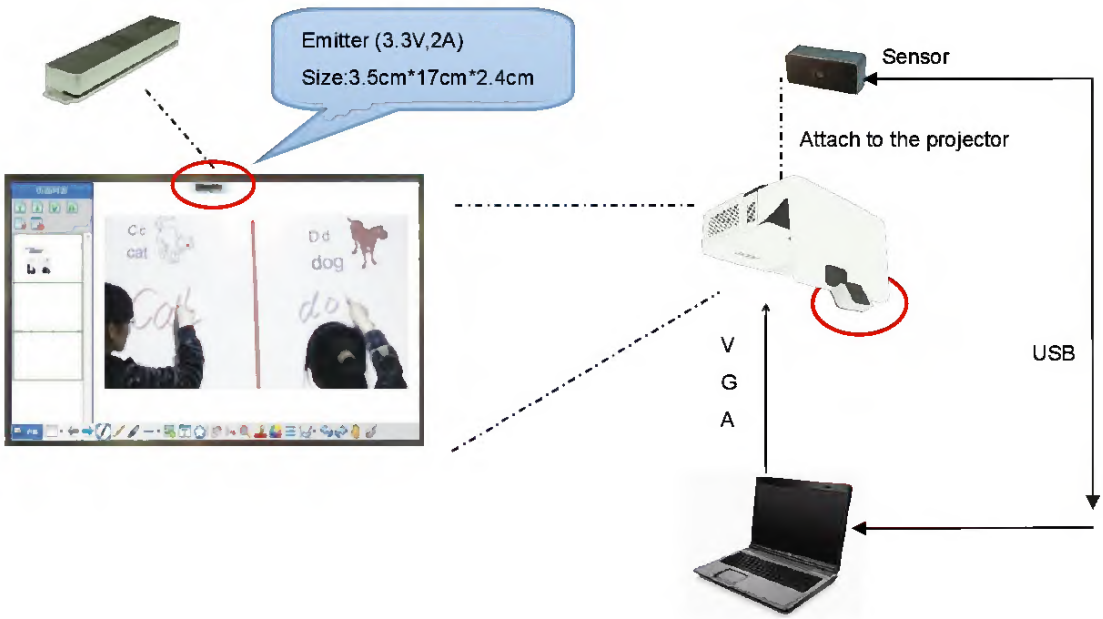

Installation requirements

1. The display surface for installation should be flat. For a better touch performance, the flatter the surface is, the easier the adjustment will be.
2. Take care of interference from sunlight when install it. We recommend using dark curtains for better results.
3. The USB cable or adapter cable cannot be cut or spliced.
4. Before installing the projector, please leave 7cm between the top side of projection screen and the inner frame of the whiteboard for emitter installation.
5. Before installing the emitter, please put one piece of 3M adhesive tape on the back side of emitter body. Measure the central point of the top side of projection screen, paste and fix emitter 3cm above the central point.(Note: the central point of emitter and the central point of projection screen should be on the same straight line.)

6. Please secure emitter by 4 screws for long term use.
7. Mount camera on top of the projector, please fix camera firmly after adjusting the camera's image in correct position and leave no parts loose.

Downloaded from www.Manualslib.com manuals search engine

Installation

Step 1: Emitter

Put an adhesive tape on the back side of the emitter, attach emitter 3cm above top center of the projection screen, and secure the emitter by 4 screws (as shown in Pic).

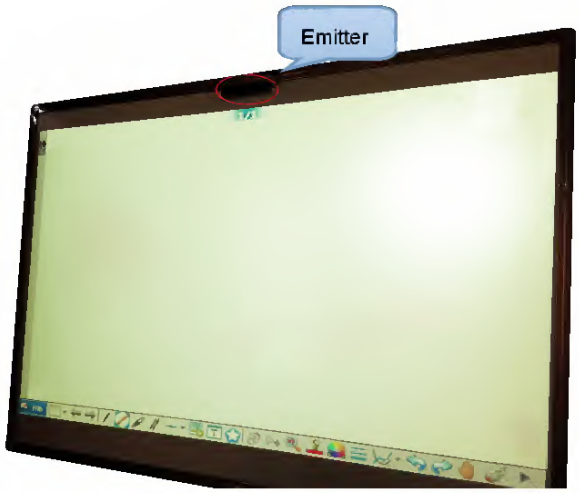

Note: if it's a Dual-Screen Smart Touch Kit, one emitter should be installed 3cm above the top of projection screen on the left side of whiteboard, the other emitter should be installed 3cm above the top of projection screen on the right side of whiteboard(red mark refers to the central point) (as shown in pic).

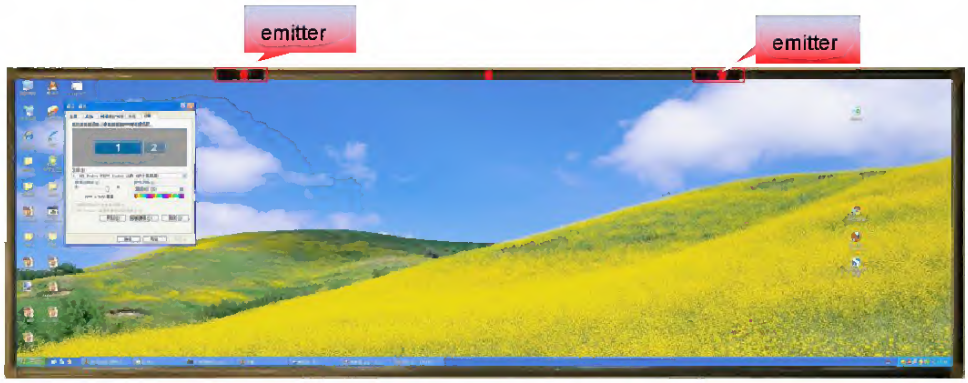

Downloaded from www.Manualslib.com manuals search engine

Step 2: Camera

1st installation method (Bracket 1)：Install the camera on the top of projector by mounting component, fix the camera firmly to prevent it from moving wobbly. Adjust the angle of camera to ensure that it can be detected by the emitter (as shown in pic).

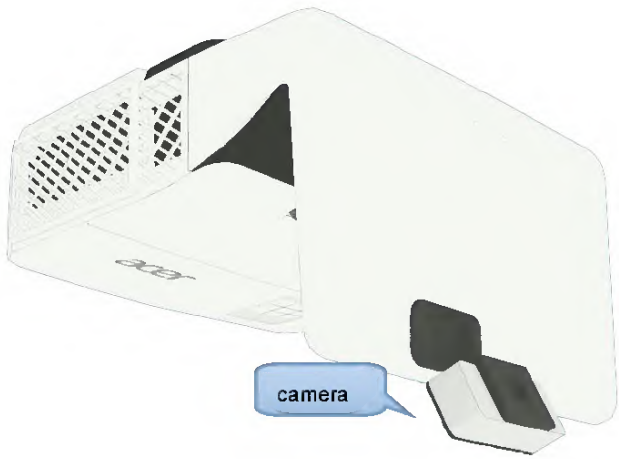

Note: If it is a Dual-Screen Smart Touch Kit, please install two cameras on two projectors respectively.

2nd installation method (Bracket 2)：

Fix the sensor to projector by using matched black supporting bracket, as following:

Downloaded from www.Manualslib.com manuals search engine

First, fix the sensor to the black supporting bracket with the matched screw by screwdriver, as following:

At last, fix the supporting bracket to the projector with matched small screws, as following:

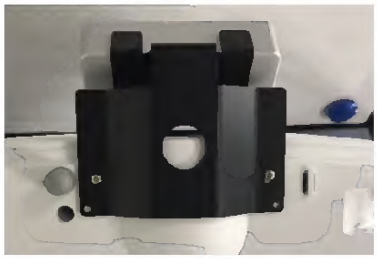

Step 3:Cable connection:

Connect the sensor with computer by using the USB cable. Emitter is connected to the power adapter.

Note:

1.Bracket 1 and bracket 2 are optional. Please kindly refer to actual packaging accessories.

2.if it is a Dual-Screen Smart Touch Kit, two sensors are connected to one computer by a USB cable respectively.

System Debugging

Software installation

Step 1 :Our software support win7, win8, and win10 OS. Put the software CD into computer and start the software by double click. Choose the language by prompt message, and select the throw ratio type according to product model.

Downloaded from www.Manualslib.com manuals search engine

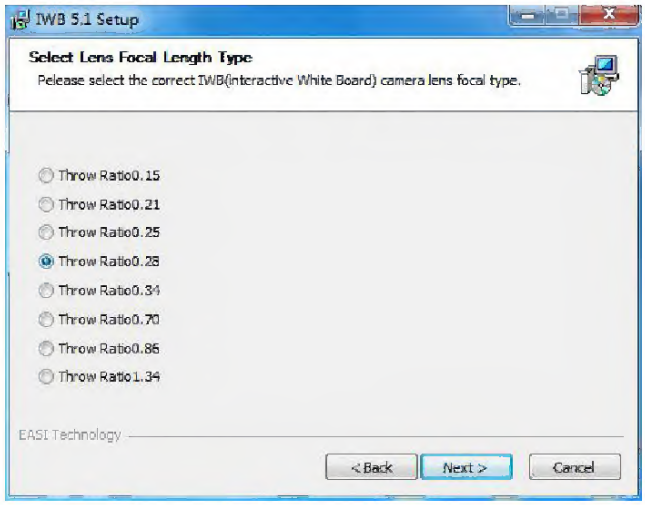

Step 2:Choose the installation path to continue it.

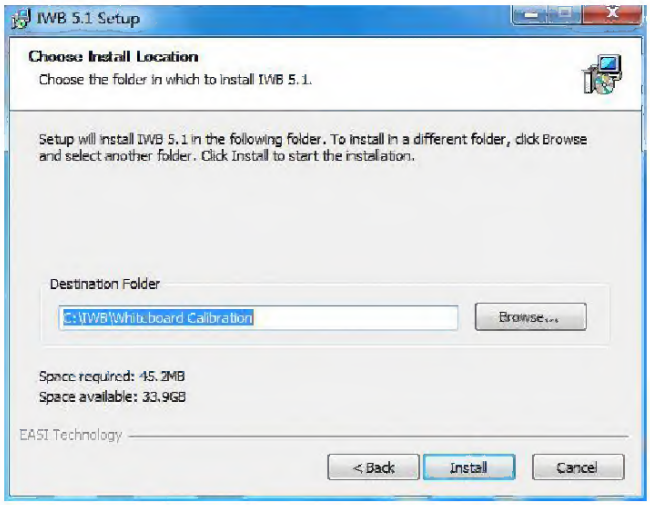
IWB 5.1 Setup
Choose Install Location
Choose the folder in which to install IWB 5.1.
Setup will install IWB 5.1 in the following folder. To install in a different folder, click Browse and select another folder. Click Install to start the installation.
Destination Folder
C:\IWB\Whiteboard Calibration
Browse...
Space required: 45.2MB
Space available: 33.9GB
EASI Technology
< Back
Install
Cancel

Step 3:Be patient to wait the installation for several minutes.

Downloaded from www.Manualslib.com manuals search engine

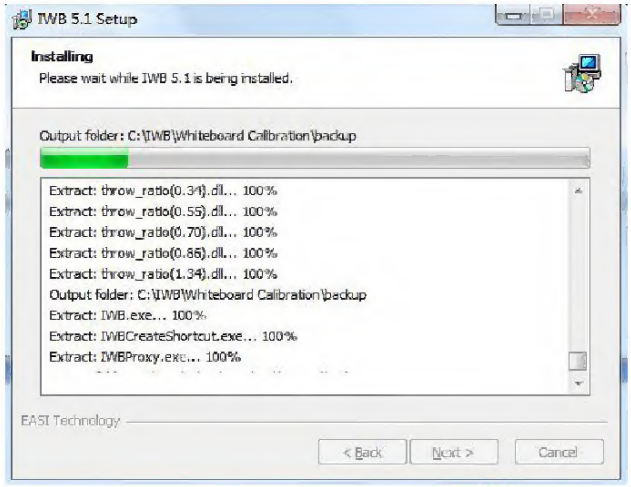

Step 4:After installation, the shortcut icon will be added to desktop.

After the installation of education software, the shortcut icon as picture will be added to desktop:

Software Uninstall

Uninstall software: Open the computer control panel, and click the "software and function" to choose and uninstall it by right click. Restart your computer after uninstall.

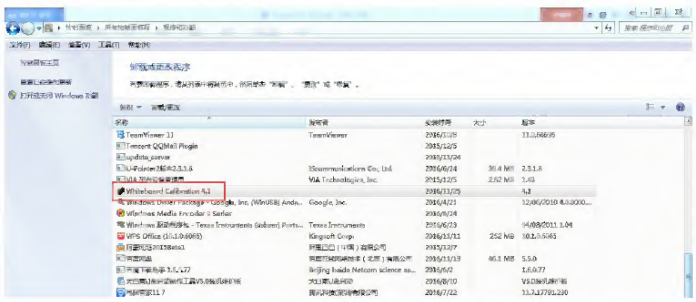

Adjust the sensor

Chose **"Installation and debugging"-"Mode 1"**, then you can see the whole screen is projected clearly (as shown in Pic).

*****Adjust the camera's position to make projection screen image show 60-80% of the software interface.**

Downloaded from www.Manualslib.com manuals search engine

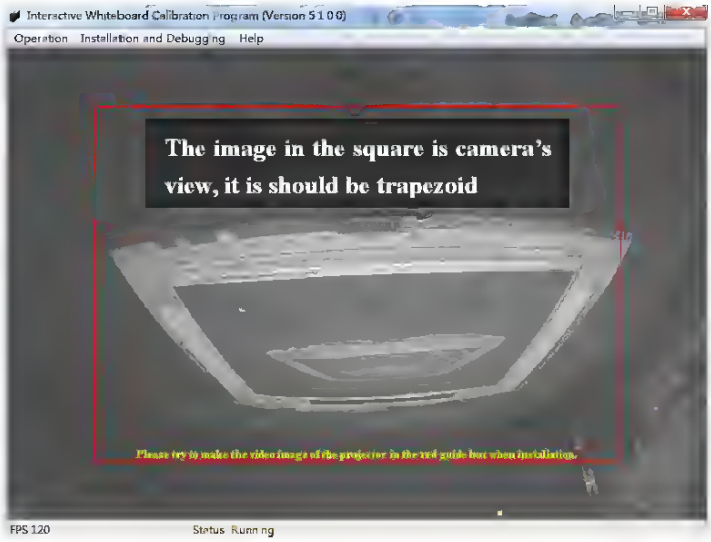
Interactive Whiteboard Calibration Program (Version 5.1.0.0)
Operation Installation and Debugging Help
The image in the square is camera's view, it is should be trapezoid
Please try to make the video image of the projector in the red guide box when installation.
FPS 120
Status Running

Note: If it is a Dual-Screen Smart Touch Kit, Left camera should show the image of left projection screen, and right camera should show the right projection screen.

When it is in camera mode, the image is in the opposite way as shown in Pic 4

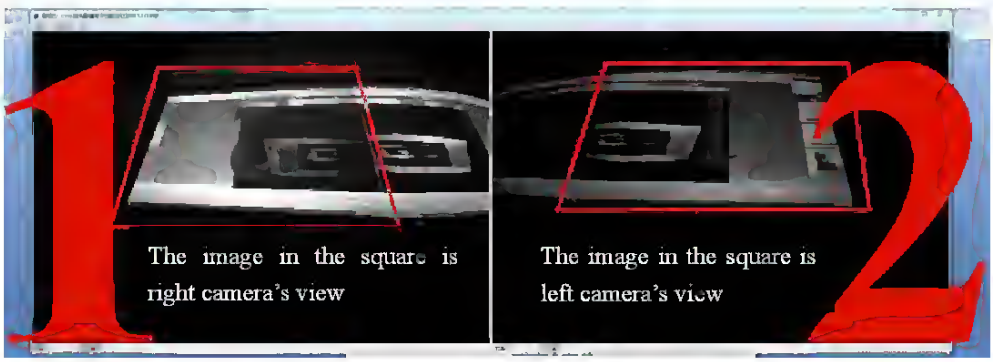

Pic 4

Then please right click on the image, chose "exchange the image", then it will be on the right as in Pic5

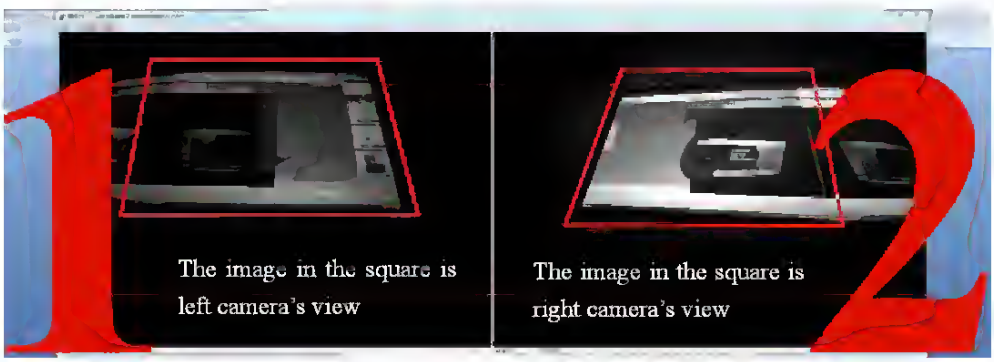

Pic 5

Adjust the emitter

1. Standard adjustment:

Choose **"Installation and debugging"-"Mode 2"**. In this mode, the emitter emits a invisible laser film to

Downloaded from www.Manualslib.com manuals search engine

cover the whole projection screen. Please keep at least 5mm vertical distance between the beam and the projection screen

2. Principle of adjustment:

Tighten the bottom screw to tilt down laser light. Perform this step when the light is way above the board.

Tighten the top side screw to tilt up laser light. Perform this step when the light hits the board.

3. Best way of adjusting emitter:

After installing the emitter, tighten the screws on the bottom first, and let the laser hit the board as shown in Pic6.

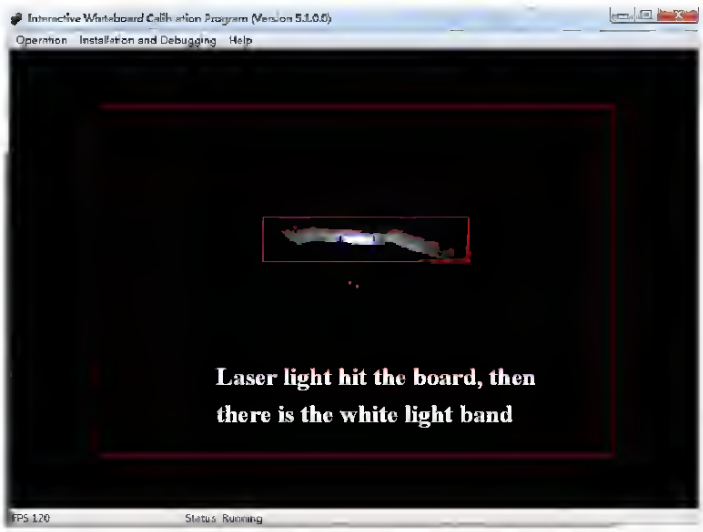
Operation Installation and Debugging Help
Laser light hit the board, then
there is the white light band
FPS 120
Status Running

Pic 6

Then tighten the screws on the top, until white light appears as shown in Pic 7

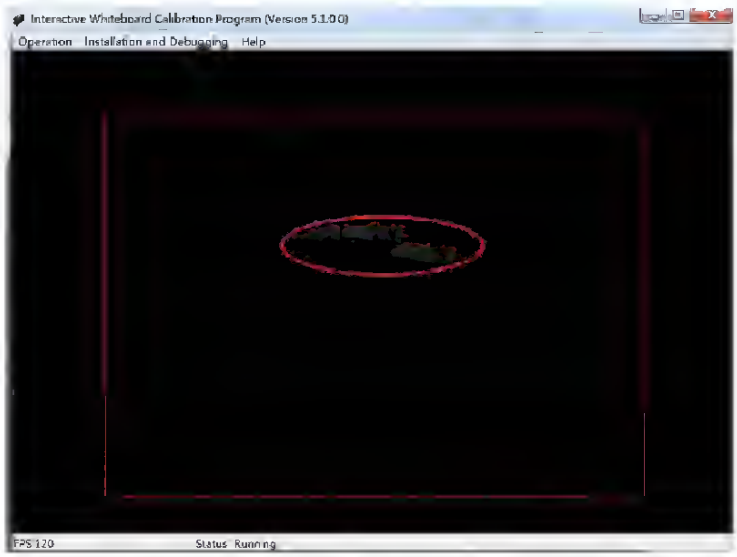

Pic 7

Note: If it is a Dual-Screen Smart Touch Kit, adjust emitters by the same way.

Downloaded from www.Manualslib.com manuals search engine

Calibration Software

Introduction

Start IWB calibration software, click "operation" menu

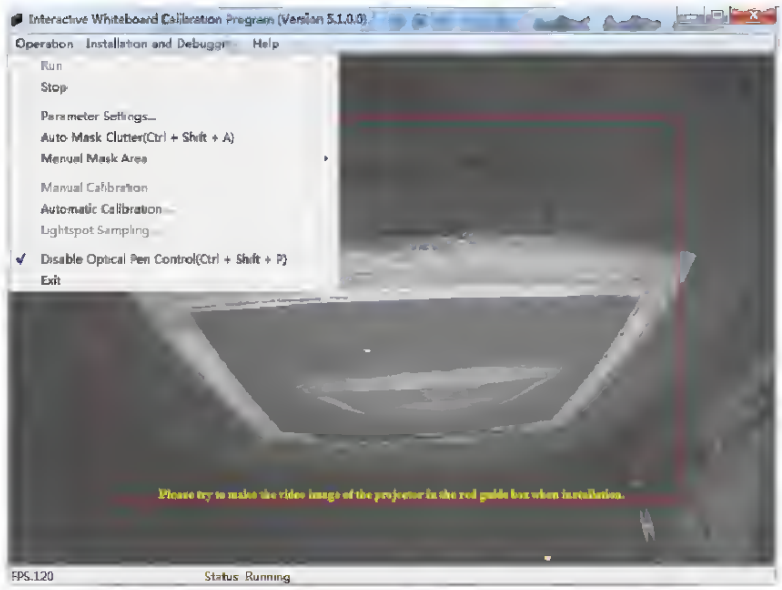

Run: Run the calibration program to start the sensor icon.

Stop: Close the sensor icon, then no more touch functions.

Parameter Setting: Software parameters Setting

Auto Mask Clutter: Auto shield the interference point from out side environment. After the auto mask clutter, the auto calibration can only be continued.

Manual Mask Area: After the auto mask clutter, if there is still some interference light spots, manual shied the interference light spot by adding mask area.

Manual Calibration: After auto mask clutter, do manual calibration. It will realize the touch function after success calibration.

Auto Calibration: The software realizes auto calibration without manual click. The calibration will finish within 5 seconds, and it realizes the touch function after success calibration.

Light spot Sampling: The light spot sampling can only be continued after manual calibration or auto calibration, which make our product adapt with current usage environment and user experience effect will be better.

Disable Optical Pen Control: After choosing it, the touch function will pause.

Exit: After software exit, the touch function will stop.

Downloaded from www.Manualslib.com manuals search engine

Parameter setting

Image Sensor Settings

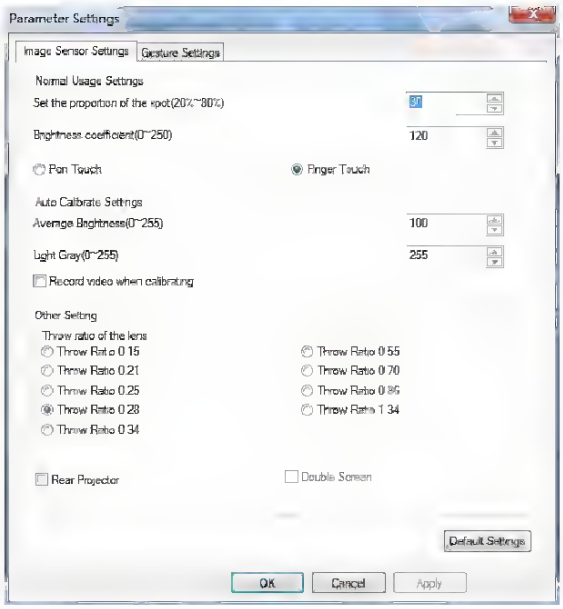

（1） Normal Use Setting

Set the Proportion of the spot (20%-80%): refers to the sensitivity of mouse reaction to lightspot sizes, the larger the value is, the worse the sensitivity becomes.

The Brightness coefficient (0-255): refers to the sensitivity of sensor to light in normal mode. The larger the value is, the better the sensitivity becomes, but when the sensitivity increase, the anti-light interference decrease.

Touch Mode: The pen touch and the finger touch. The software will auto select it.

（2）Auto Calibration Setting

Average Brightness (2-255): refers to the sensor receiving the overall picture brightness of "black and white checkerboard" presented in software during the process of automatic calibration. The larger the value is, the brighter the brightness is.

Light Gray (0-255): refers to the "black and white checkerboard" overall picture contrast presented during automatic calibration process by the calibration software. The larger the value is, the greater the contrast between the black area and the white area in the "black and white Checkerboard."

Video record: Record the auto calibration process after selected, and the record video will be saved in the installation menu of calibration software.

（3）Other setting: refers to the focal length type of product, and it should be selected according to product model.

（4）Other mode

Rear Projector: if your projector is a rear projector, please choose it.

Downloaded from www.Manualslib.com manuals search engine

Double Screen: two Smart Touch Kits work with two projectors to become a big touch screen Finish installation and connection, then the program will be in double screen mode automatically

Parameter Settings:Gesture settings

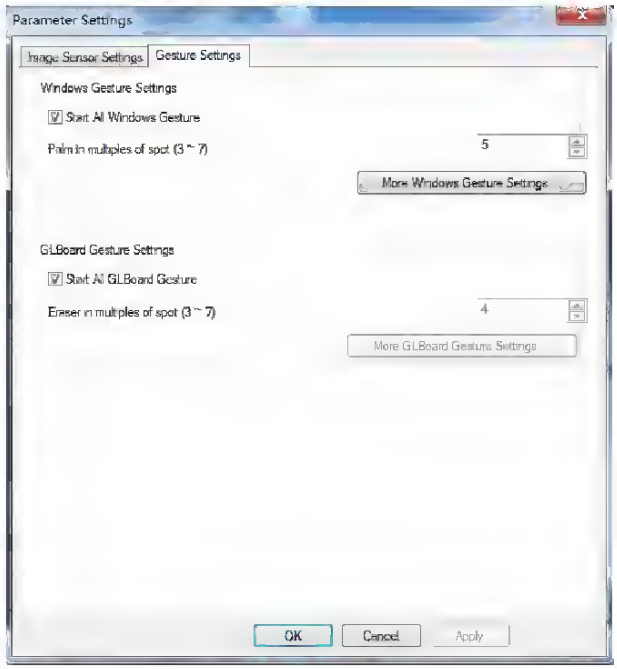

(1) **Windows Gesture Settings**

Start All Windows Gesture: refers to the switcher of Windows Gesture

Palm in multiples of spot (3~7): refers to the sensitivity of palm gesture. The lower the value is, the better the sensitivity is.

(2) GLBoard Gesture Settings

Start All GLBoard Gesture: refers to the switcher of GLBoard gesture.

Eraser in multiples of spot (3~7): refers to the sensitivity of palm eraser gesture. The lower the value is, the better the sensitivity is.

Downloaded from www.Manualslib.com manuals search engine

More Windows Gestures

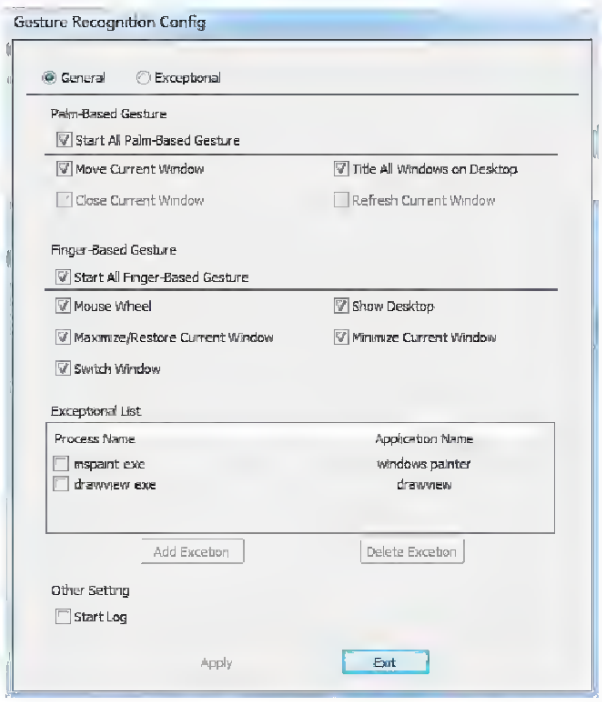

General Process: In General Process, you can see all the gestures recognition based on palm and finger. The user can start and close any gesture recognition based on their requirements.

Exceptional Process: In Exceptional Process, you can add exceptions. Click "Add exception" to select the process to be added to Exceptional List. Select the process added in Exceptional List, , and then Gesture recognition can be applied to the program you want to use. The user can start and close any gesture recognition based on their requirements. This function is setting gesture recognition for third party software

Downloaded from www.Manualslib.com manuals search engine

Auto Mask Clutter (Ctrl+Shift+A)

Auto mask clutter is the first step to do before performing manual calibration. Please select "Auto Mask Clutter" from "Mask Bitmap Edit" or press "Ctrl+Shift+A". The program will specify the active area automatically.

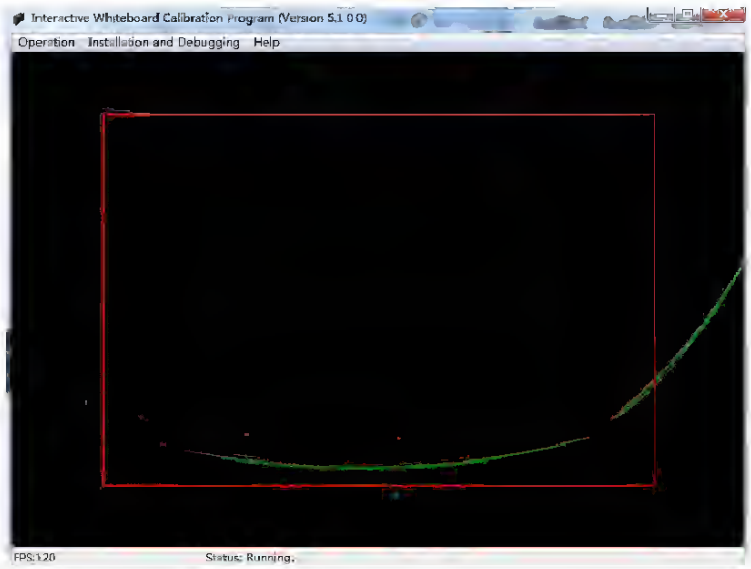

Manual Calibration

After auto mask clutter, click manual calibration,and Then you will see ,Use finger or IR pen tip to do calibration by touching crosshair. When it finishes, the software will be minimized to taskbar, and it will realize the touch function.

Downloaded from www.Manualslib.com manuals search engine

Auto Calibration

Click auto calibration, the projection image will change to auto calibration interface

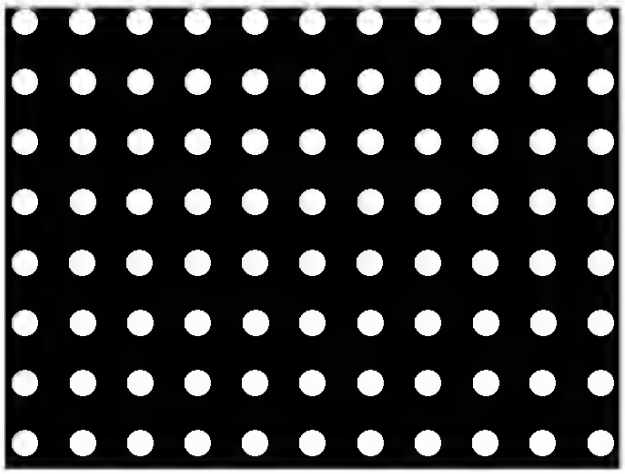

After 5 seconds, the auto calibration finished, the screen image will return to projection image. When you open the software, the image is as below and hint auto calibration succeeded

Lightspot Sampling

After the auto calibration and manual calibration, click lightspot sampling, and the projection image will change to lightspot sampling interface. Use finger or IR pen to touch the red box, and continue the next one when the red box change to green.

Downloaded from www.Manualslib.com manuals search engine

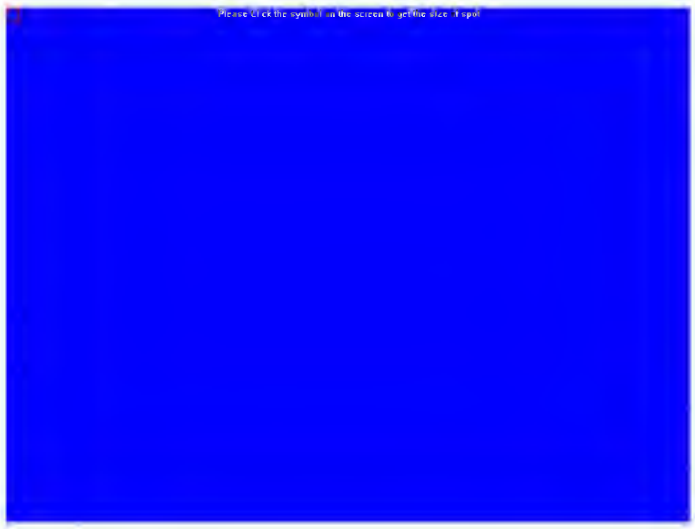

Installation and debugging

Click "installation and debugging" menu

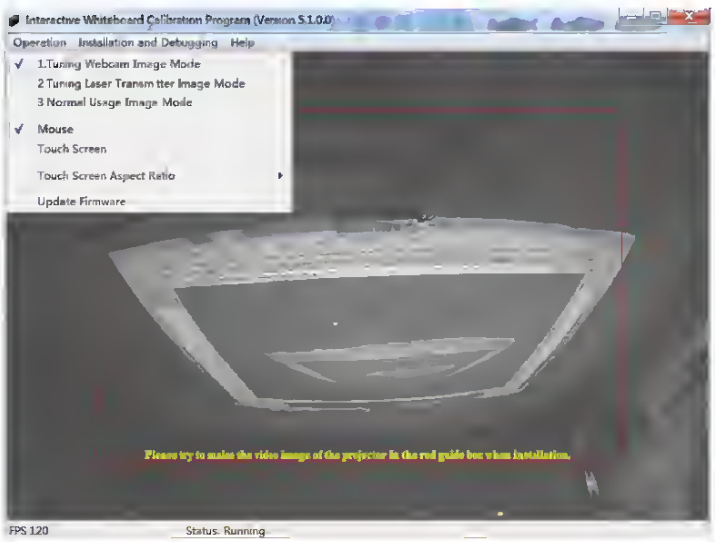

（1）**Tuning Webcam Image Mode:** The projection image which catched by camera will be showing in software interface. Adjust the projection image into the red frame according to the camera debugging requirement.

（2）**Tuning Laser Transmitter Image Mode:** In this mode, emitter emits a set of invisible laser film 4mm above the whiteboard, and the beam should be parallel with the whiteboard. The light spot size should be not less than 9 pixels when you use finger to touch 4 corners.

Downloaded from www.Manualslib.com manuals search engine

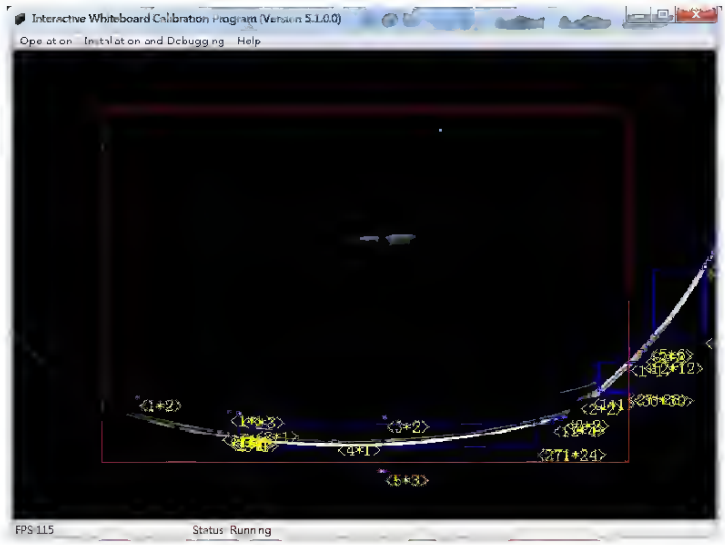

（3）**Normal Usage Image Mode**: after the calibration, all operations can be done by the finger instead of the mouse.

（4）**Mouse**: click mouse, then you can only do single touche in Windows.

（5）**Touch Pad**: click touch pad, then you can do multi-touches in Windows.

（6）**Touch Pad Aspect Ratio**: The default mode is auto selected. When the deviation of touch pad accuracy is more than 3cm, you can try following 3 aspect ratios (16:9，16:10，4:3) to rectify it.

（7）**Update Firmware**: Don't use it in normal usage condition. When you meet the abnormal image in camera mode, such as black screen, white screen, etc, please contact our technical person for guidance.

Downloaded from www.Manualslib.com manuals search engine

Gesture recognition Introduction

Mouse operations

Single Click: single finger tap

Double Click: single finger tap twice quickly at the same position

Right Click: single finger stays for 2 or 3 seconds at the same position for right click function

Scroll Bar: open a website, scroll the page up and down by single fingers directly

Gesture recognition in Windows

Slide up with 5 fingers for maximizing or backing to the windows

Slide down with 5 fingers for minimizing the windows

Two fingers rotate the picture

Two fingers away from or closer for zoom in and zoom out the picture or the website

Slide up the bottom of screen with palm for displaying all the windows

Slide from left or right with 5 fingers for shifting the windows

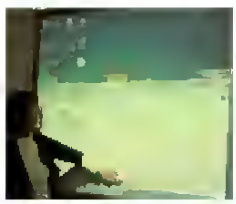

Stay 1s with palm in one window for moving it

Slide down with 10 fingers for minimizing all the windows

Gesture recognition in education software GLBoard

Erase with palm

2 fingers away for moving the page

Double step with palm for backing to the desktop

Stay 1s with palm for spotlight

In any non-writing operation, double click with single finger for shifting to write

Downloaded from www.Manualslib.com manuals search engine

Application Software

Introduction of the main toolbar

When you use GLBoard for the first time, double click GLBoard

to start the program, the interface includes three areas, shown as the following

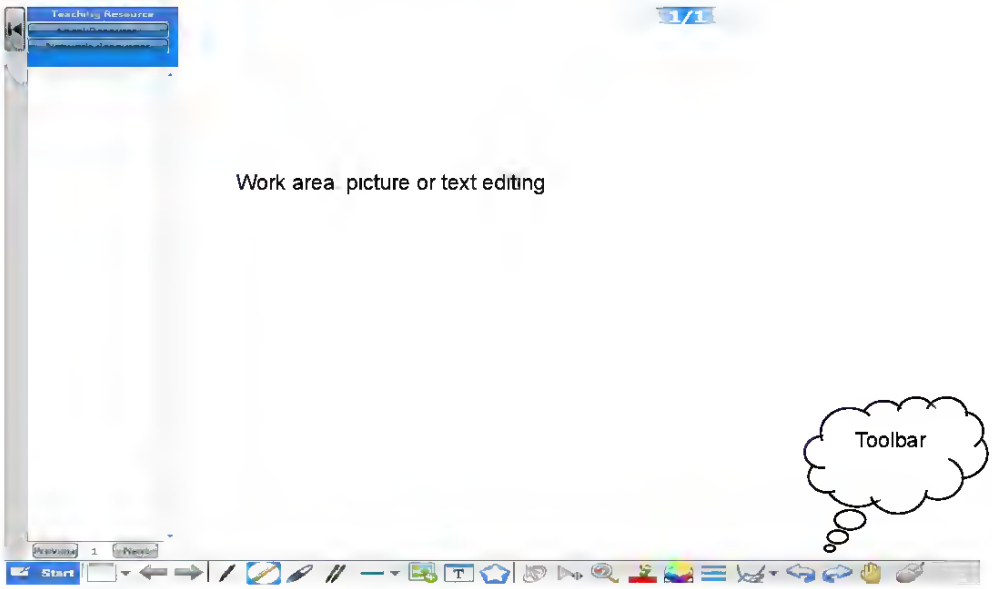

Function of each button on the tool bar

Icon	Name	Function
	Start menu	Open the menu list
	Resource	Local resource Click to find many pictures Network resource Click to search any picture you likeon the web
	New page	There are four options 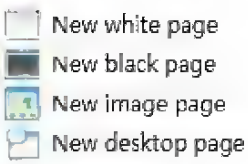
	Back	Go back to the previous page
	Forward	Forward to the next page

Downloaded from www.Manualslib.com manuals search engine

	Pen	Write like a ball pen
	Brush	Write like a Chinese brush pen
	Smart pen	Convert drawings to geometric shapes
	Multi-writing mode	Support ten persons writing simultaneously
	Insert shape	Several shapes can be chosen, such as triangle, square, and circle
	Import picture	Insert pictures from your computer
	Import text	Insert text frame, then edit the words
	Fill	Fill geometric shapes with different colors
	Select stroke	Select the handwriting on the page, and "drag and zoom"
	Select picture	Move geometric shapes, text and pictures
	Zoom in and out	Zoom in or zoom out the picture
	Pen color	Adjust color of the pen
	Fill color	Choose the color to fill
	Pen width	Set stroke width and line type
	Eraser	Three options 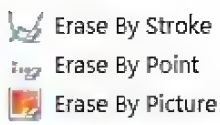
	Undo	Cancel the last operation
	Redo	Redo the operation just canceled by undo
	Move	Move the edit screen
	Windows	Go back to the desktop

Downloaded from www.Manualslib.com manuals search engine

When you click to go back to the desktop, GLBoard will appear as a floating toolbar

Icon	Name	Function
	Windows	Back to the desktop
	Pen	Write like a ball pen
	New page	Open a new white page
	New page	Open a new black page
	Back	Go back to the previous page
	Forward	Forward to next page
	Eraser	Erase by stroking
	Back	Go back to the main page of GLBoard
	Note page	Make the window screen as the background

Downloaded from www.Manualslib.com manuals search engine

	Preview Note page	Go back to the previous note page
	Close	Close GLBoard
	Width	Set stroke width

Start Menu List

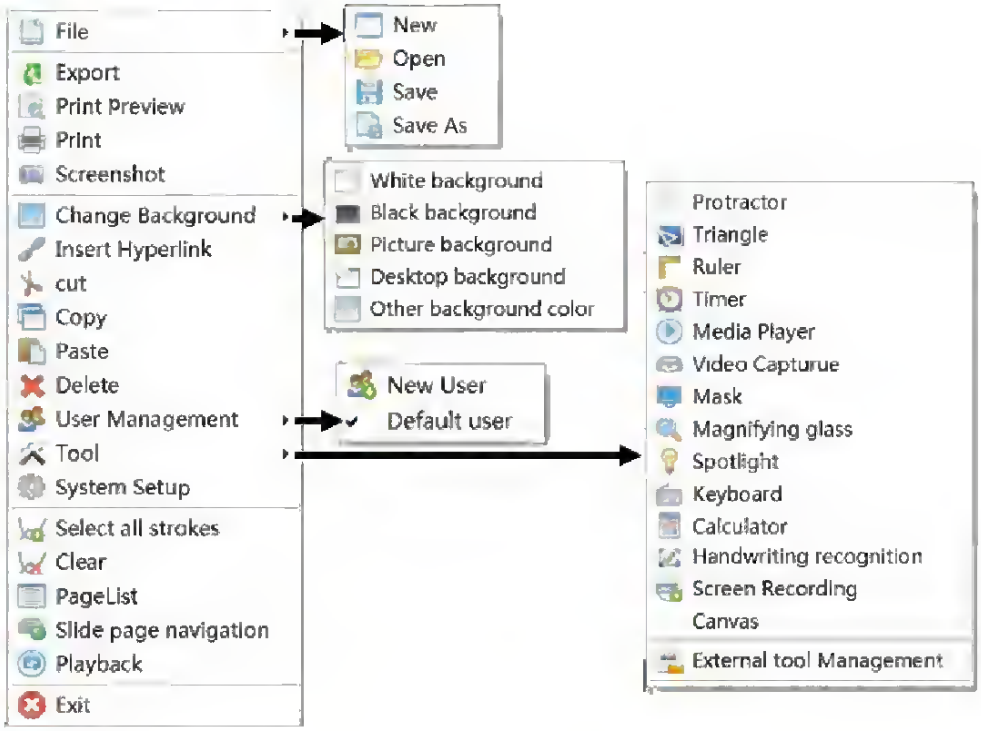

Menu	Submenu	Function Description
File	New	Create a blank file. If any file has not been saved before, a save message will be shown.
	Open	Open an existed PPT, PDF, PTS file.
	Save	Save the file under editing.
	Save As	Save as a new file.
Export		Export as an image file to Windows.
Print Preview		After print settings for the document are set, the user can preview the print result of the document.
Print		Any words, images, or visible data in GLBoard, could be output on media like paper through the printer.
Screenshot		Go back to Windows interface, select the area which

Downloaded from www.Manualslib.com manuals search engine

		you want to capture, and then click OK
Change background	White background	Background color is white
	Black background	Background color is black
	Picture background	Background is a picture
	Desktop background	Choose the Desktop as background
	Other background color	Chose the background color yourself
Insert a hyperlink		Insert a hyperlink that could open a linked page directly
Cut		Cut the selected word and image
Copy		Copy a file from one place to another place, while the old one remained
Paste		Paste the copied and cut content directly
Delete		Delete the selected word or image from the system
User management	New user	Used to add a new user
	Default user	Default user on the system
Tool	Protractor	Common teaching tool for math
	Triangle	Common teaching tool for math
	Ruler	Common teaching tool for math
	Timer	Timing tool
	Media Player	Media player
	Video Capture	The window for playing video in GLBoard
	Mask	Similar to a movie screen for the teacher to explain examples. Questions and answers are displayed separately
	Magnifying glass	Magnify the important part to facilitate teaching
	Spotlight	Spotlight can highlight a circular area, high brightness display, and other regions of translucent display
	Keyboard	Same as the Windows on-screen keyboard
	Calculator	Same as the Windows Calculator
	Handwriting recognition	Handwriting input (see "gesture recognition" introduction)
	Screen Recording	Record the activities on the GLBoard as a video file
System Setup		Startup setting and page setting, etc
Select all strokes		Select all strokes in the screen area
Clear		Clear all strokes in the screen area
PageList		Show all pages of GLBoard in a list

Downloaded from www.Manualslib.com manuals search engine

Slide page navigation		Show the slides in the PPT. First open a PPT file, and then use this function to show.
Playback		Replay.
Online resource	Pep.com.cn	Connect to pep.com.cn
Exit		Exit GLBoard

Downloaded from www.Manualslib.com manuals search engine

Troubleshooting

1. Open the program and an error is shown as "No valid USB Key for hand touch whiteboard found".
   (1) First check if the connection of USB cable is correct.
   (2) Please confirm if the USB cable has not been cut or spliced.
   (3) Please confirm if the system is equipped with a recovery card. Please add the calibration program to the recovery card.
   (4) See if the system uses a solid state disk. If so please contact technical support.
   (5) Change to another one USB port or another computer and test again.

2. After the auto-calibration, the cursor does not synchronize with the finger.
   (1) Open "tuning webcam image mode", confirm whether the proportion of projection screen (photoed by camera) meets the requirement.
   (2) Open "tuning laser transmitter image mode", confirm whether the laser film is within 5mm above whiteboard surface, and the image appears to touch the board lightly.
   (3) If the two steps above meet the requirements and the problem persists, contact technical support.

3. When doing auto-calibration, it prompts failure?
   (1) Open "tuning webcam image mode", observe whether the projection screen (photoed by camera) is within the calibration interface or not, and if the proportion of the image meets the requirements, and whether the image is clear or not.
   (2) Toggle "tuning webcam image mode" and "tuning laser transmitter image mode" repeatedly to observe if the brightness of the image changes. If the image is always black, please change the sensor.
   (3) Observe the picture after the calibration failure and analyze the overall brightness of the "black and white checkerboard". If it is too bright, please adjust the value of the average brightness down to 40, and adjust the value of gray down to 250; if it is totally black, please adjust the value of the average brightness up to 140, and adjust the value of gray down to 250.
   (4) If auto-calibration still cannot be performed after adjusting the parameters, please perform manual calibration or contact technical support.

4. Device is installed according to the requirements, and auto-calibration is successful. Yet the operation is not sensed well in top right corner, and the writing is non-continuous.
   (1) Open the calibration program, write in the non-continuous area, and observe whether there is a lightspot in the non-continuous area. If not, please change the emitter.
   (2) If there is a spot, and the spot is small. Firstly adjust the bright coefficient, adjust the value up to around 170.
   (3) Do lightspot sampling

In the calibration program installation directory, change the value of the Light Spot. Minimum Width and Light Spot Minimum Height to 1 in the config file.

Downloaded from www.Manualslib.com manuals search engine

Important information

Note: If you are a user of the product, please read the related warning information and product maintenance methods as below carefully. Before you install the product, please fully understand safety information in the guide. It could prevent you from making mistakes, leading to product damage and safety issues.

Warning:

Please do not look into the bulb of the projector as it will harm your eyes.

Warning:

When installing the projector brackets, two persons are needed to work together.

Warning:

When fixing the camera on the projector at a high position, extra caution is needed.

Warning:

The product cannot be installed in a place exposed to direct sunlight.

Warning:

When installing, the USB cable and the cable of the adapter should be securely fixed to avoid being tripped and causing damage to the product.

Warning:

Do not install the product in a dark, wet place. Doing so will damage product functions and its lifetime.

Downloaded from www.Manualslib.com manuals search engine

Sales Feedback Form

Dear user:

Thank you for using our products. In order to make our products to better serve you, please help us to fill in the real details about our product completely. Your opinion about our company product will continuously help to improve product quality. plays a very important role for your cooperation, our heartfelt thanks to we can further cooperation.Thank you for your cooperation with us and hope we can reach further cooperation in the future.

User Name			Add			Email	
Tel		Fax		Contact Person		Delivery Date	
Product Name		Quantity		Specification		Contract No.	
Project Name						Usage Time	
Usage Description:							
Service Description:							
Others:							
Suggestion:							

Downloaded from www.Manualslib.com manuals search engine